

SHOWER BASE INSTALLATION INSTRUCTIONS

PLEASE READ CAREFULLY AS NOT ALL SHOWER BASE INSTRUCTIONS ARE THE SAME



IMPORTANT SHOWER BASE MUST BE STORED FLAT (NOT LEANING ON OUTLET) AND KEPT DRY AND AWAY FROM DIRECT SUNLIGHT PRIOR TO INSTALLATION

STEP 1 Prior to installation, check thoroughly for defects

- STEP 2**
- Ensure that the product has no chips and is not cracked, this includes the waste outlet
 - Ensure that all visible surfaces are free from scratches.
 - Ensure that there is no twisting or distorting of the product
 - Ensure the shower base suitably drains water when levelled

The above checks are essential prior to installation as the manufacturer has no control over storage, transportation and delivery once it leaves the Oceano warehouse.

The manufacturer will not be held responsible for removal or replacement cost of a Shower Base as a result of the Shower Base having a defect, if said defect was identifiable prior to installation.

Installation of the Shower Base will be treated as acceptance of quality.

Timber floor installation


- Check floor for soundness ensure there is no rot and all joists are solid enough to support the new base.
- Measure support ring on underside of base, cut hole in floor 15mm bigger to allow for adjustment of base if required. Additional Joists should be secured around cutout in flooring to ensure the floor is solid enough to carry the weight of the shower base.
- Base can be installed using a cement base tile adhesive and a 12mm notched trowel, a 10mm 4: 1 mortar mix. The underside of the base must be fully supported over the entire surface area (Excluding waste) If floor is not level DO NOT use packers to level the base.
- Once the base is in position, level and water test the base. Due to surface tension, large droplets of water will remain on the surface however large pools should not be evident.

Waterproofing / Expansion Joints


- As per AS3740

Warning- Do not install shower base on the following.

- Silicone
- Construction adhesive
- Sand
- Plaster base coat
- Rubber base tile adhesive
- Do not use packers to support base

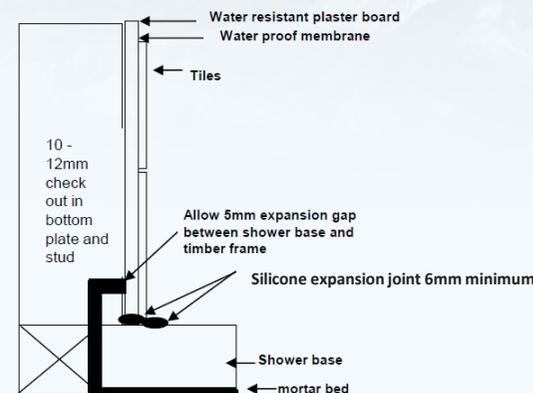

Water test shower base once level by pouring a bucket of water onto the base.

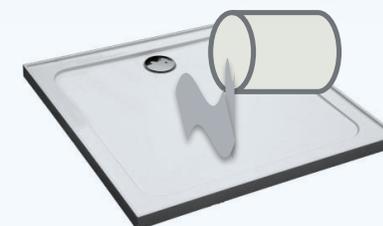

Water Temperature should not exceed 55°C.



**7 Year
Replacement
Warranty***



**1 Year
Labour
& Parts***

oceano.com.au

oceano
BATHROOM

SHOWER BASE INSTALLATION INSTRUCTIONS


PLEASE READ CAREFULLY AS NOT ALL SHOWER BASE INSTRUCTIONS ARE THE SAME



Concrete floor installation


- Void area in slab **MUST not exceed 300mm x 300mm.**
- Support ring span is **300mm maximum, 150mm from center of outlet in all directions.**
- Base can sit directly over a smart pan.
- Base can be installed using a cement base tile adhesive and a 12mm notched trowel, a 10mm 4:1 mortar mix
- The underside of the base must be fully supported over the entire surface area (Excluding waste) If floor is not level DO NOT use packers to level the base.
- Once the base is in position, level and water test the base. Due to surface tension, large droplets of water will remain on the surface however large pools should not be evident.

Water test shower base once level by pouring a bucket of water onto the base.

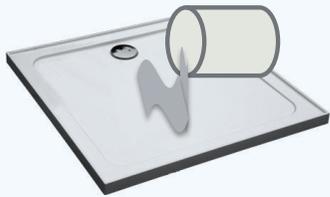

WASTE OUTLET

If the shower base you have purchased requires the outlet to be installed, run a generous amount of silicone to the underside of the outlet flange and position in base. Place black rubber ring up against underside of the base and hand tighten nut into position. (Do not over tighten) Clean off any excess silicone from around the outlet flange and the shower base surface.

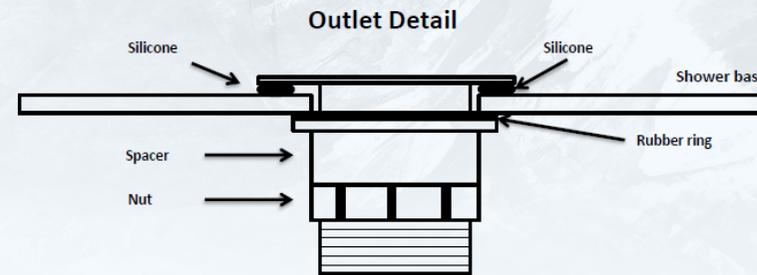

Cleaning

Use a soft cloth with warm soapy water or general household detergent, DO NOT use bleach, abrasives such as steel wool or abrasive cloths as they can damage the surface.

Installer

Please leave a copy of the installation instructions for the end user.

Failure to follow instructions will void warranty



**7 Year
Replacement
Warranty***



**1 Year
Labour
& Parts***

oceano.com.au

oceano
BATHROOM

All nominated sizes are approximate and correct at time of publication. Oceano reserves the right to make modifications without prior notice. *Conditions Apply. Updated February 2026.

SHOWER BASE INSTALLATION INSTRUCTIONS

PLEASE READ CAREFULLY AS NOT ALL SHOWER BASE INSTRUCTIONS ARE THE SAME



CARE & MAINTENANCE - STONELITE SHOWER BASES

To maintain the appearance and performance of your shower base:

- > Clean regularly using pH-neutral bathroom cleaners only
- > Rinse thoroughly with clean water after cleaning
- > Dry the surface where possible to prevent chemical residue build-up
- > Do not use bleach, acidic cleaners, mould removers, or abrasive products
- > Do not use rubber-backed or non-slip mats on the shower base surface
- > Do not allow cleaning chemicals or water to remain trapped on the surface for extended periods
- > **Failure to follow these instructions may result in surface damage and is not covered by warranty.**



**7 Year
Replacement
Warranty***



**1 Year
Labour
& Parts***

oceano.com.au

oceano
BATHROOM

All nominated sizes are approximate and correct at time of publication. Oceano reserves the right to make modifications without prior notice. *Conditions Apply. Updated February 2026.