

# PROFILE SHOWER SCREEN INSTALLATION INSTRUCTIONS

**PLEASE READ CAREFULLY AS NOT  
ALL INSTRUCTIONS ARE THE SAME**



# PROFILE SHOWER SCREEN INSTALLATION INSTRUCTIONS

**PLEASE READ CAREFULLY AS NOT  
ALL INSTRUCTIONS ARE THE SAME**

## GENERAL INFORMATION

Before you start: ATTENTION

Please read these instructions through carefully before you start the installation. Incorrect product installation may result in serious product failure which will not be covered under your guarantee. The wall profiles are designed to allow for 20mm adjustment when fitted to out of true walls. The thickness of the tiles used will affect the overall position of the assembly in situ.

Check the number of components to ensure you have all the parts listed and make sure you have the right tools to hand.

Two people are required for certain parts of the assembly and it is always recommended that a technically competent installer should undertake the installation.

Ensure that the enclosure is fitted to a level base. The wall plugs included with this product are suitable only for solid walls. Plasterboard or stud walls may require specialized fixings which are not provided. Handle all glass components with extreme care avoiding any damage to the corners and edges which may cause it to shatter.

## TOOLS REQUIRED



SILICONE



SPIRIT  
LEVEL



DRILL



6MM  
DRILL BIT



FLAT  
SCREWDRIVER



GLOVES



TAPE  
MEASURE



PENCIL



MALLET



3.0MM  
DRILL BIT



PHILLIPS HEAD  
SCREW DRIVER



PROTECTIVE  
EYEGLASSES




**THIS PRODUCT IS HEAVY AND MAY  
REQUIRE TWO PEOPLE TO INSTALL.**

# PROFILE SHOWER SCREEN INSTALLATION INSTRUCTIONS FRONT ONLY

**PLEASE READ CAREFULLY AS NOT  
ALL INSTRUCTIONS ARE THE SAME**



## ASSEMBLY DRAWING


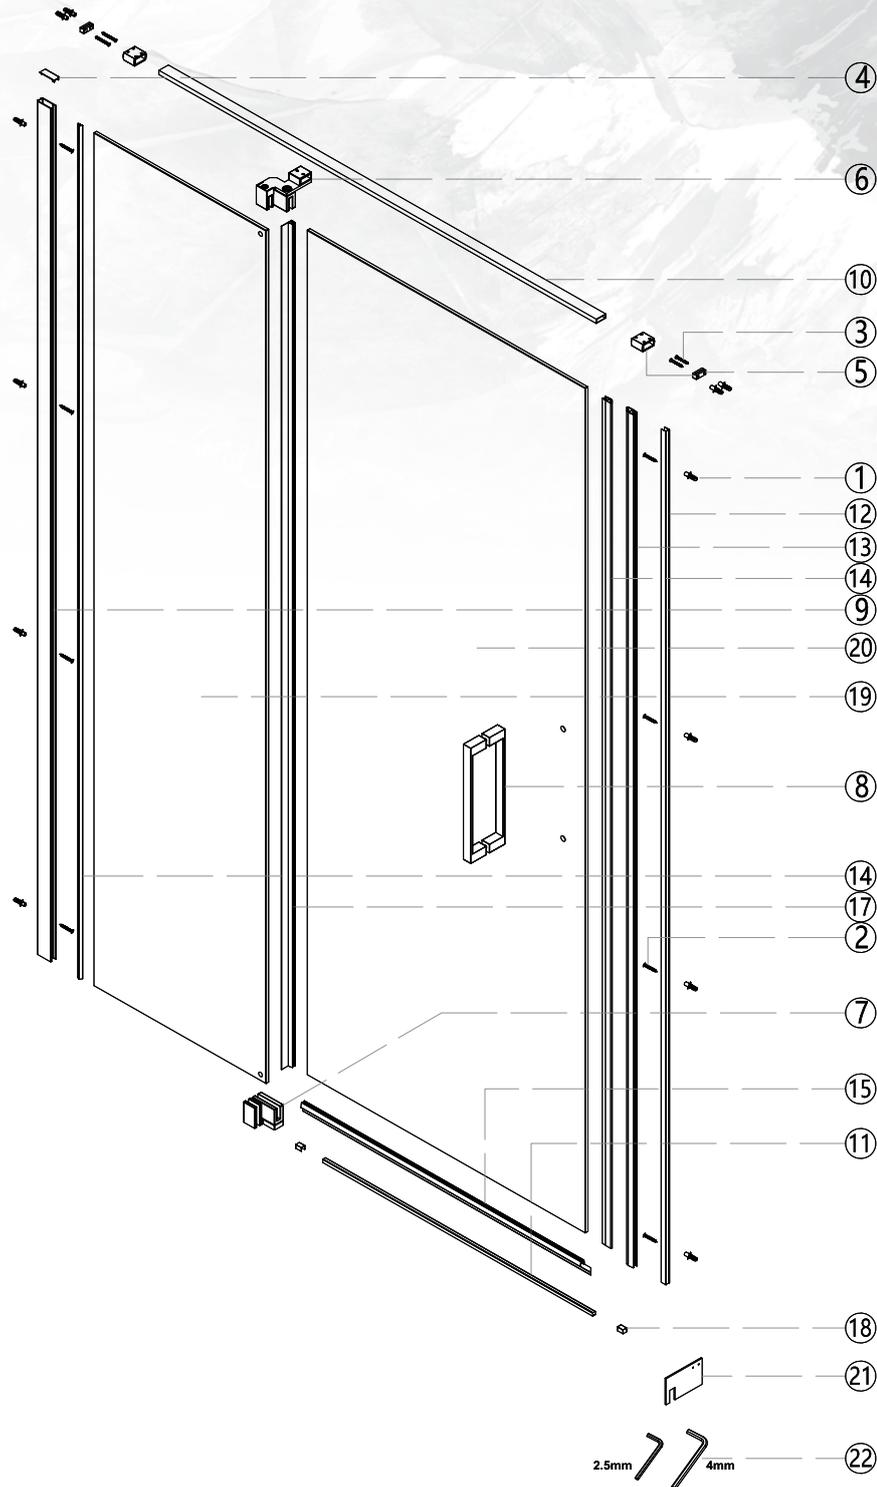



# PROFILE SHOWER SCREEN INSTALLATION INSTRUCTIONS

**PLEASE READ CAREFULLY AS NOT  
ALL INSTRUCTIONS ARE THE SAME**

## REQUIRED PARTS

NO.	Item	Qty
1		x12
2		x4
3		x12
4		x1
5		x2
6		x1
7		x1
8		x1
9		x1
10		x1
11		x1
12		x1

NO.	Item	Qty
13		x1
14		x1
15		x1
16		x1
17		x1
18		x2
19		x1
20		x1
21		x1
22	 2.5mm 4mm	x1




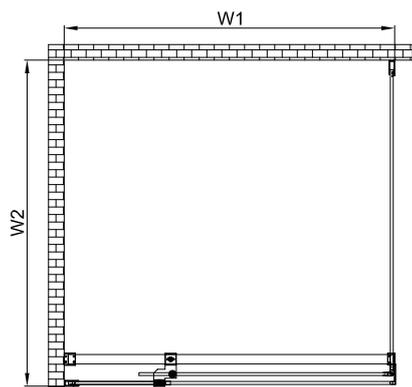


Models	Profile Adjustments	
	Min-Max W1 mm	Min-Max W2 mm
900	810-890	845-865
1000	910-990	945-965
1200	1120-1200	1145-1165

# PROFILE SHOWER SCREEN INSTALLATION INSTRUCTIONS

**PLEASE READ CAREFULLY AS NOT  
ALL INSTRUCTIONS ARE THE SAME**

## STEP 1

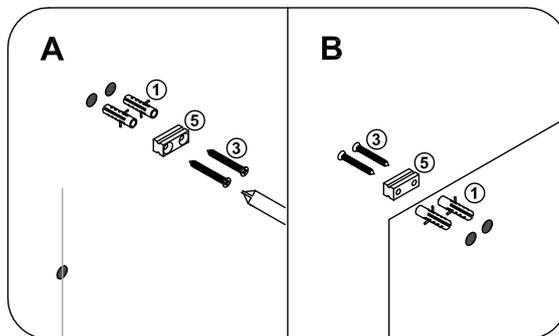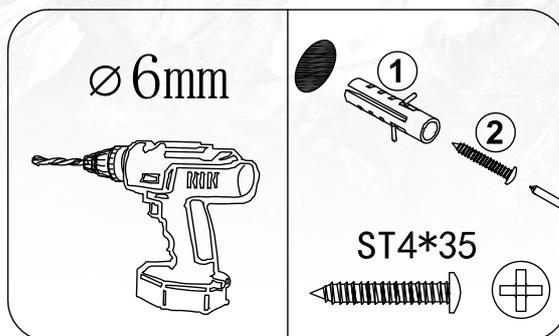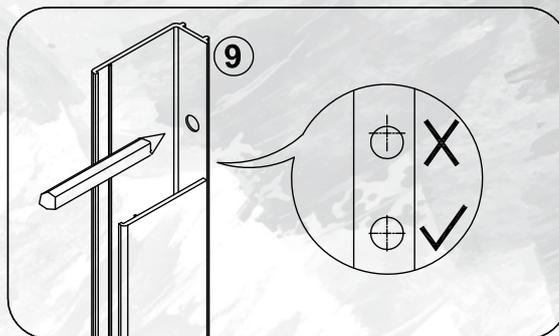
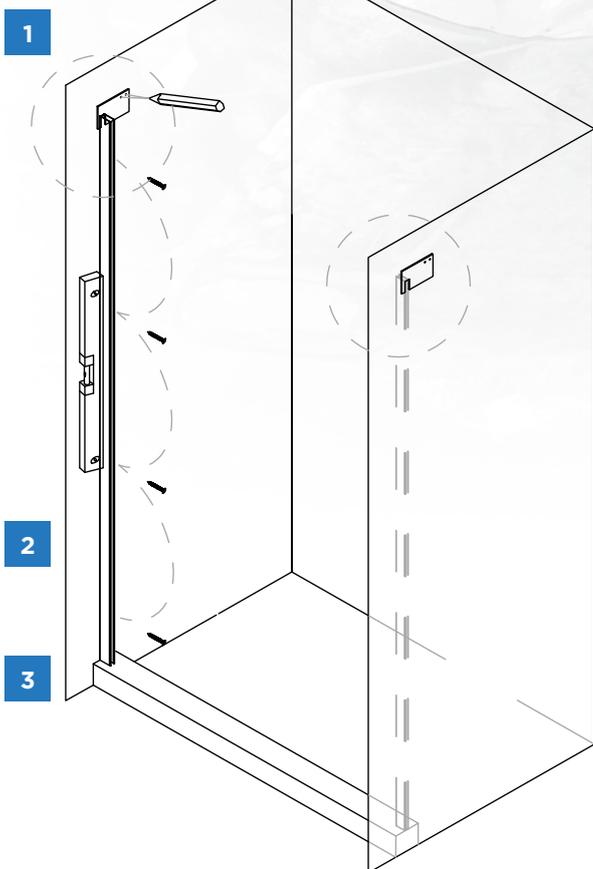


- 1 Measure in 6mm from edge of shower base or tile flange.
- 2 Fix wall jamb using screws provided, Oceano recommends fixing to studs.
- 3 Position template over wall jamb and ensure it is level before marking holes for wall bracket.

# PROFILE SHOWER SCREEN INSTALLATION INSTRUCTIONS

**PLEASE READ CAREFULLY AS NOT  
ALL INSTRUCTIONS ARE THE SAME**

## STEP 2

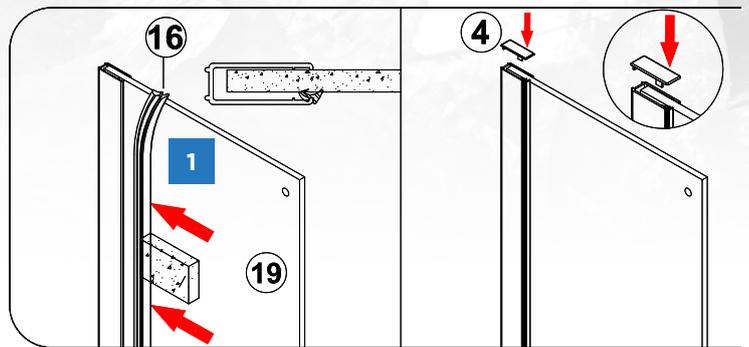
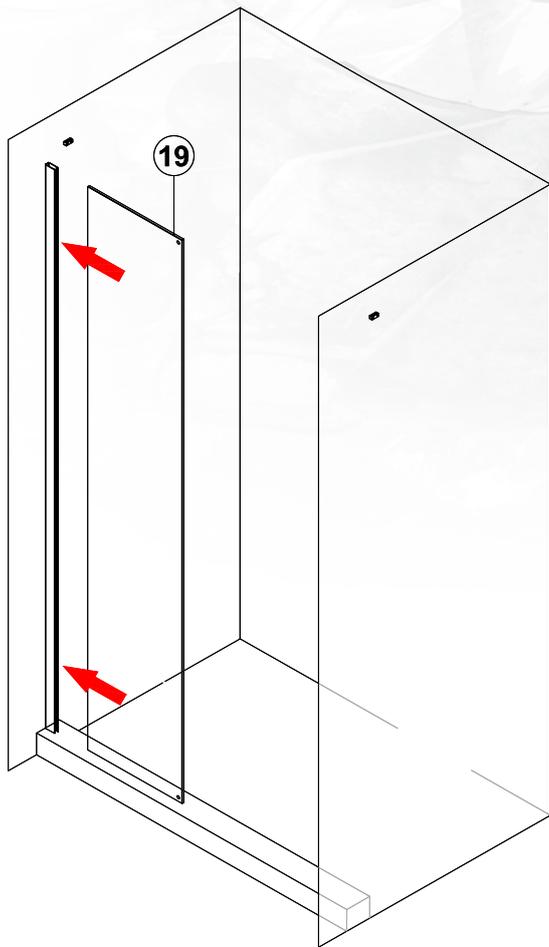


- 1 Ensure fixed glass panel is plumb then insert plastic strip on the outside of the shower screen wall jamb. Start from the bottom and work towards the top, do not cut excess plastic strip in-case it needs to be removed for adjustment later.

# PROFILE SHOWER SCREEN INSTALLATION INSTRUCTIONS

**PLEASE READ CAREFULLY AS NOT  
ALL INSTRUCTIONS ARE THE SAME**

## STEP 3

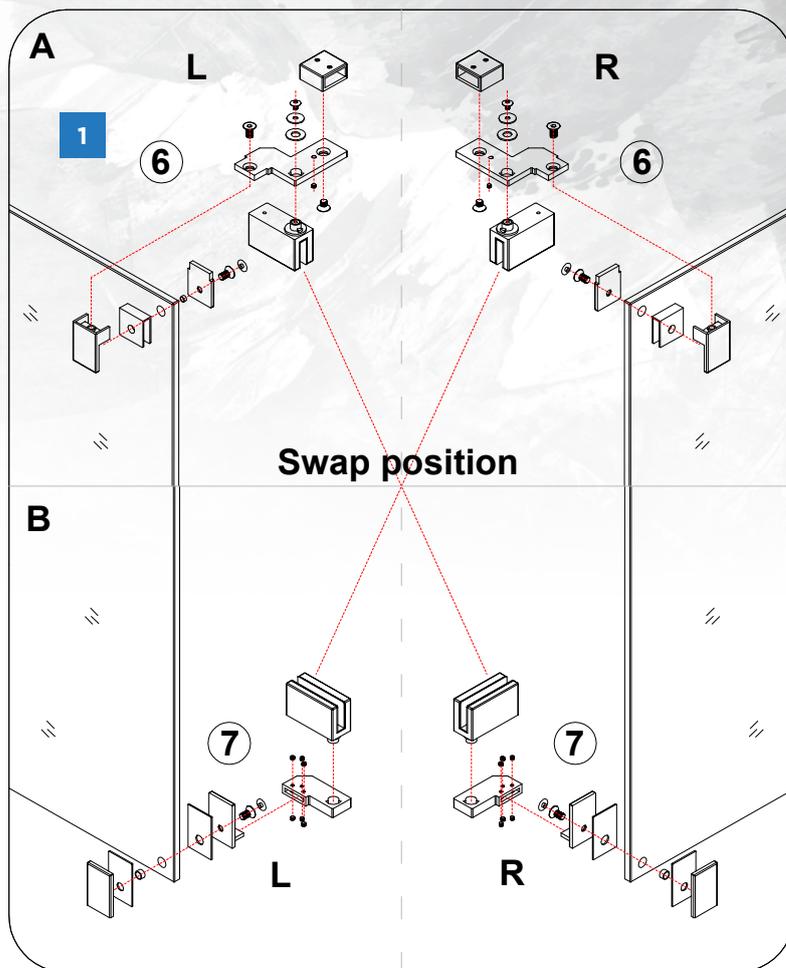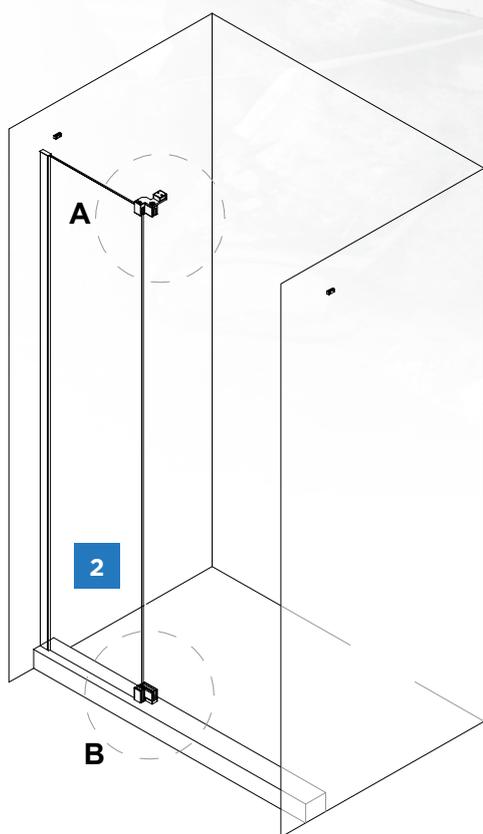

Hinges are setup for left hand hinge, right hand handle on door from factory.

1 Change hinge from left hand to right hand.

Disassemble top pivot assembly , turn pivot arm upside down.

Reassemble top bracket using the bottom pivot block . then use the top pivot block for the bottom pivot assembly.





Ensure all screw are tight.

Install hinge assemblies to glass panel.

# PROFILE SHOWER SCREEN INSTALLATION INSTRUCTIONS

**PLEASE READ CAREFULLY AS NOT  
ALL INSTRUCTIONS ARE THE SAME**

## STEP 4

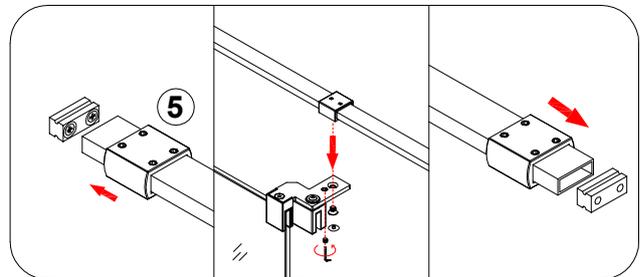
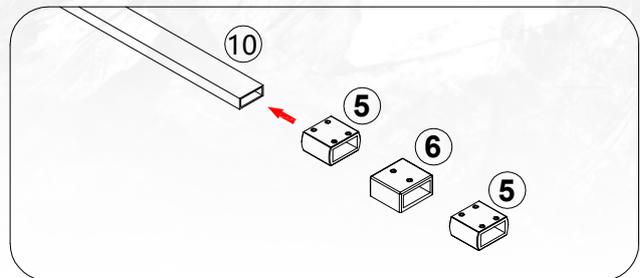
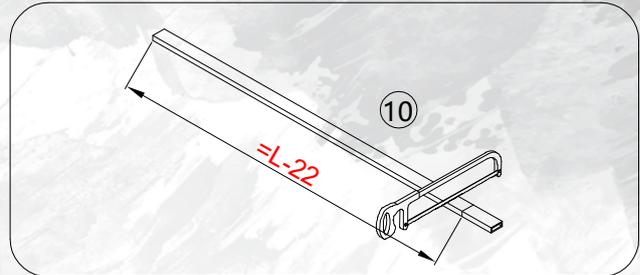
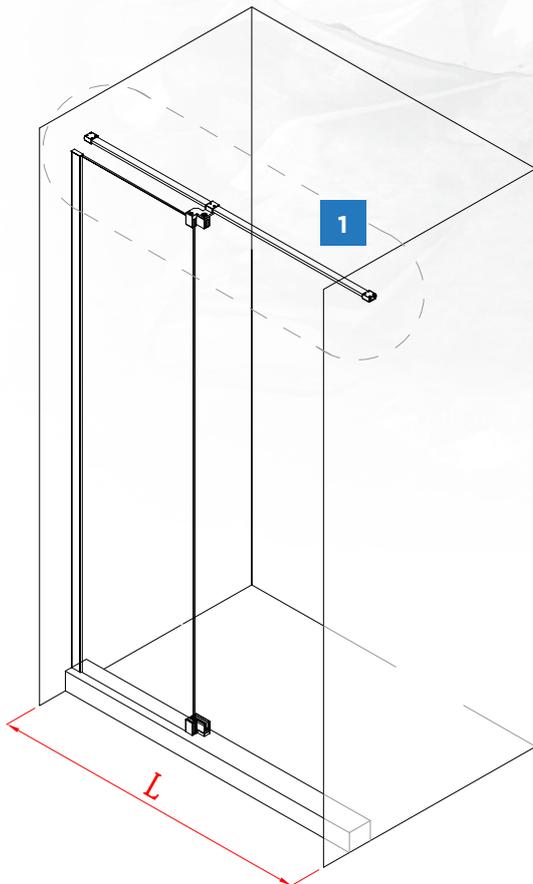


- 1 Cut top rail to length, be sure to allow for both wall brackets when calculating length.  
Slide top rail through pivot assembly and line up to first wall bracket.  
Level top rail and mark second wall bracket position on wall.

# PROFILE SHOWER SCREEN INSTALLATION INSTRUCTIONS

**PLEASE READ CAREFULLY AS NOT  
ALL INSTRUCTIONS ARE THE SAME**

## STEP 5

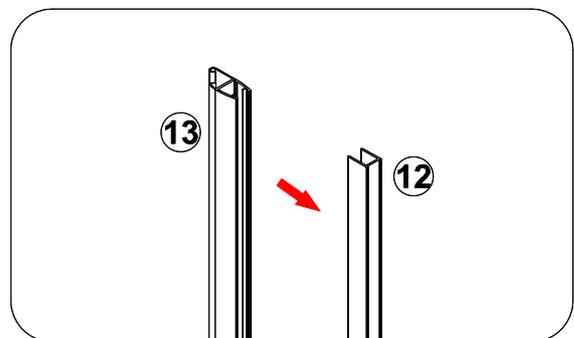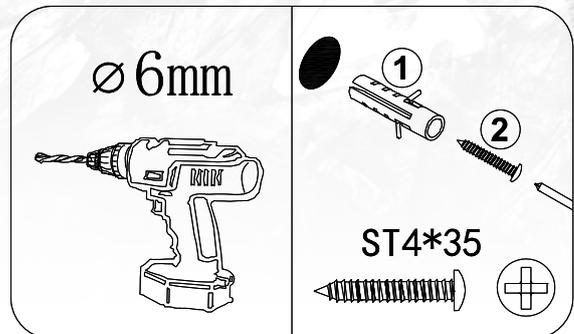
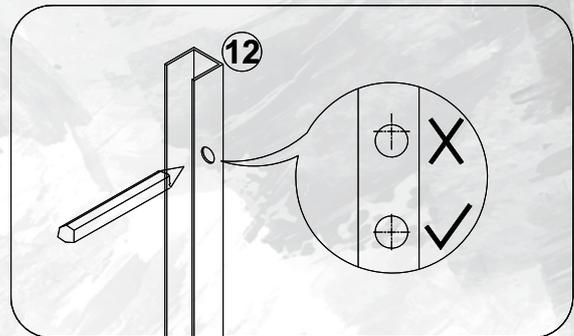
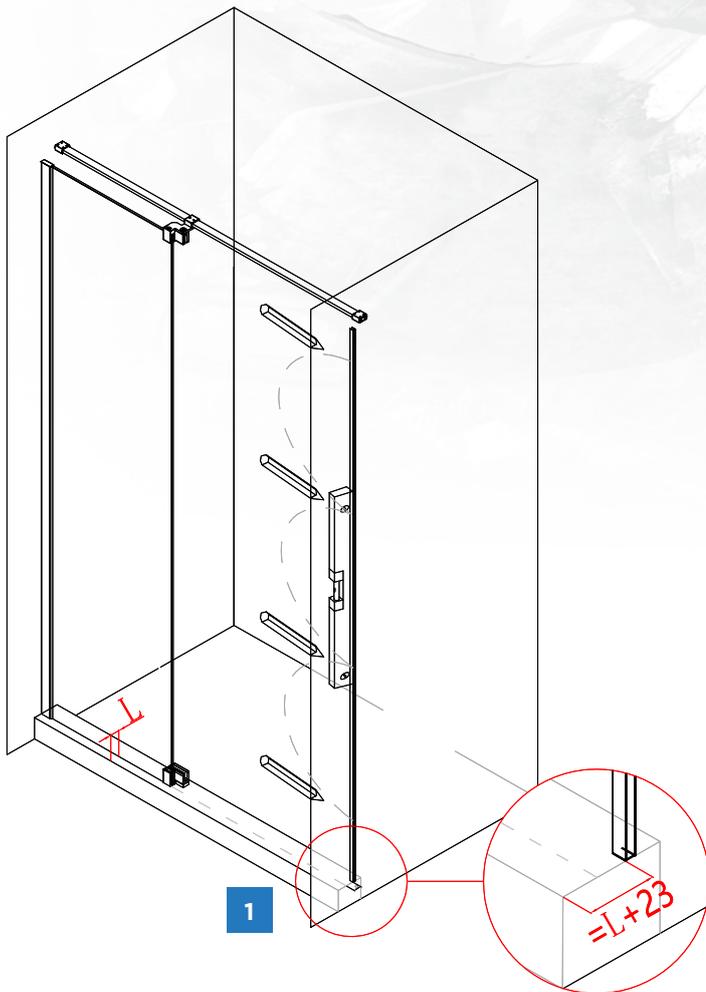


- 1 Mark outside line of screen to wall as per picture.  
Measure in 23mm and fix wall channel to wall.  
Install magnetic strip over wall channel.

# PROFILE SHOWER SCREEN INSTALLATION INSTRUCTIONS

**PLEASE READ CAREFULLY AS NOT  
ALL INSTRUCTIONS ARE THE SAME**






## STEP 6

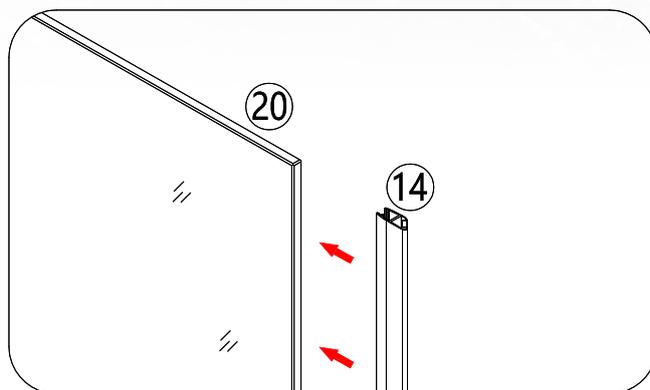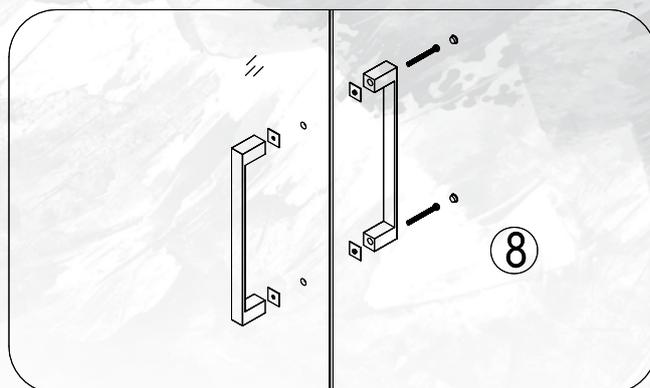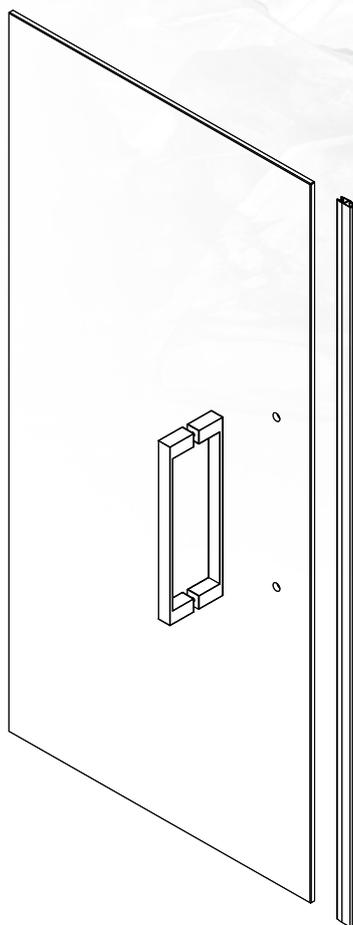

# PROFILE SHOWER SCREEN INSTALLATION INSTRUCTIONS

**PLEASE READ CAREFULLY AS NOT  
ALL INSTRUCTIONS ARE THE SAME**

## STEP 7

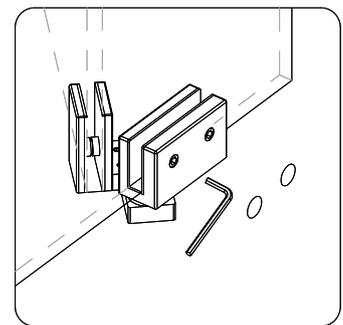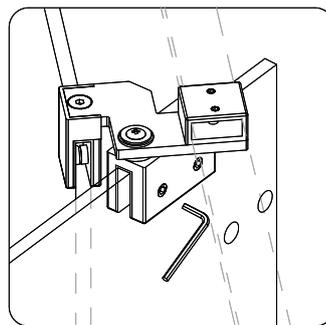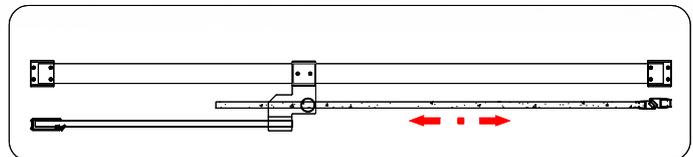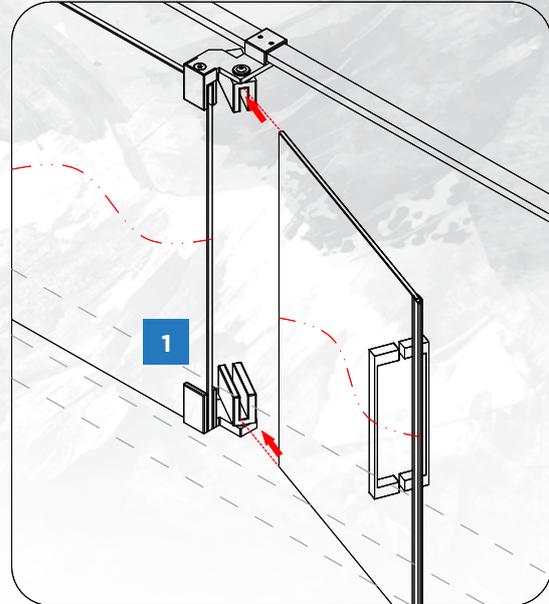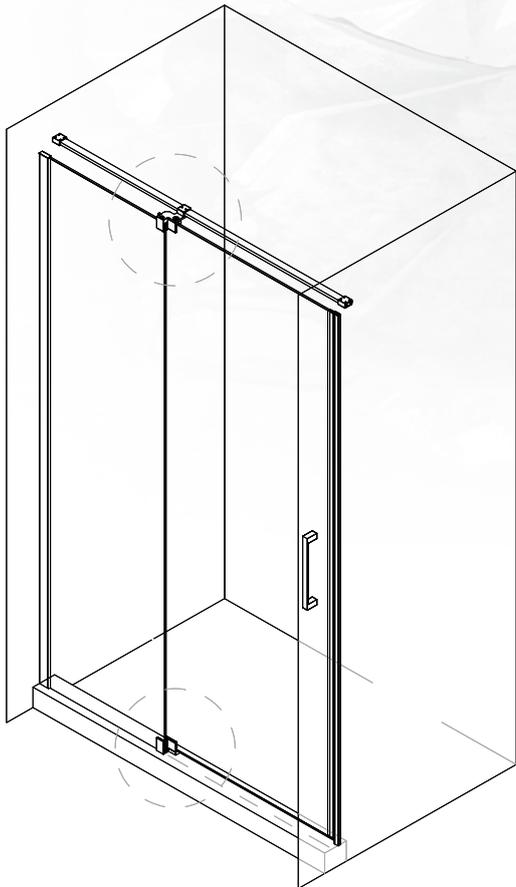





2 people may be required to install door panel.

- 1 Slide door panel into both pivot blocks.
- 2 Slide door in or out of pivot blocks so magnetic strip on the door lines up to the magnetic strip on the wall channel.
- 3 Once both magnetic strips join correctly , tighten screws on top hinge first followed by bottom hinge.

# PROFILE SHOWER SCREEN INSTALLATION INSTRUCTIONS

PLEASE READ CAREFULLY AS NOT  
ALL INSTRUCTIONS ARE THE SAME



## STEP 8

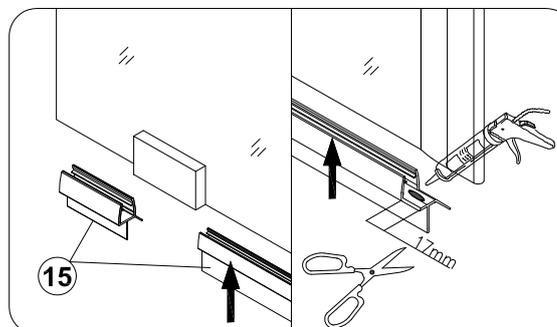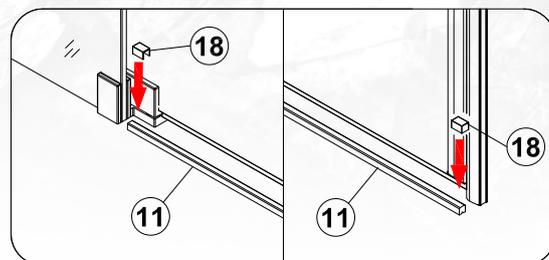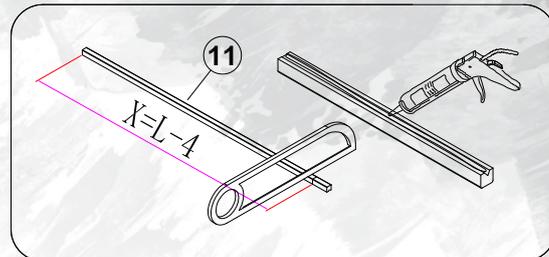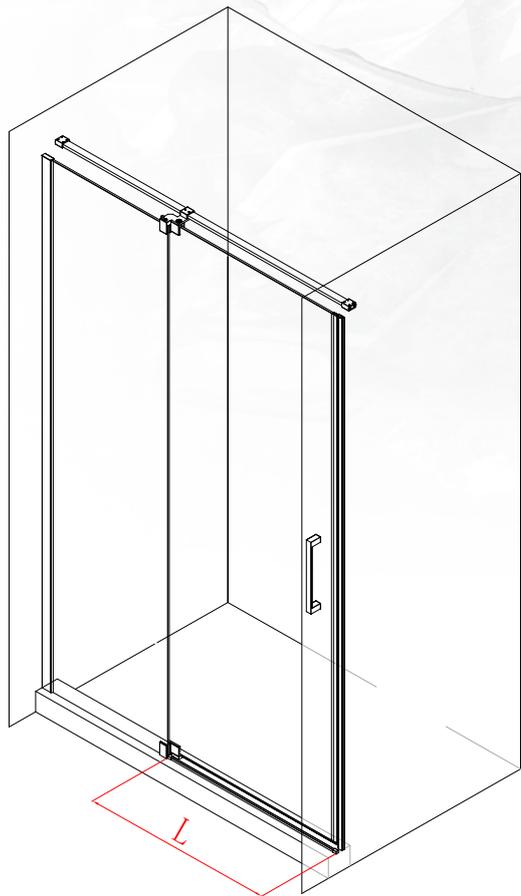

# PROFILE SHOWER SCREEN INSTALLATION INSTRUCTIONS

**PLEASE READ CAREFULLY AS NOT  
ALL INSTRUCTIONS ARE THE SAME**

## STEP 9

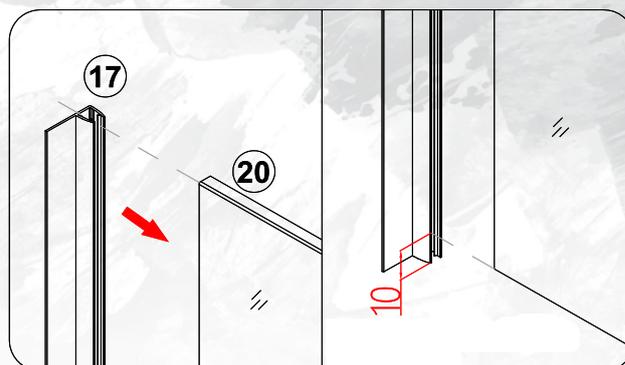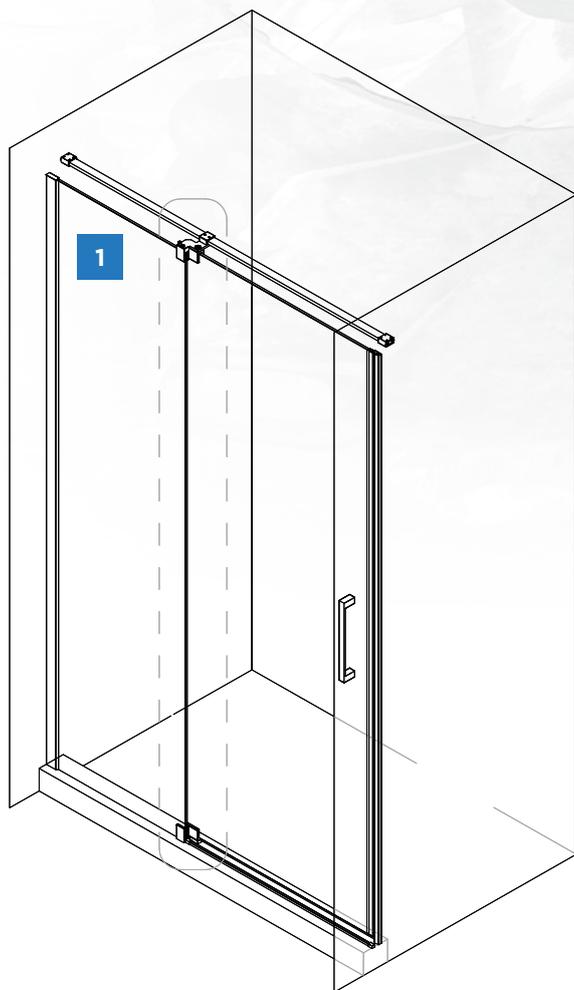


1 Cut excess plastic strip in line with the top of the wall jamb.

# PROFILE SHOWER SCREEN INSTALLATION INSTRUCTIONS

**PLEASE READ CAREFULLY AS NOT  
ALL INSTRUCTIONS ARE THE SAME**


## STEP 10

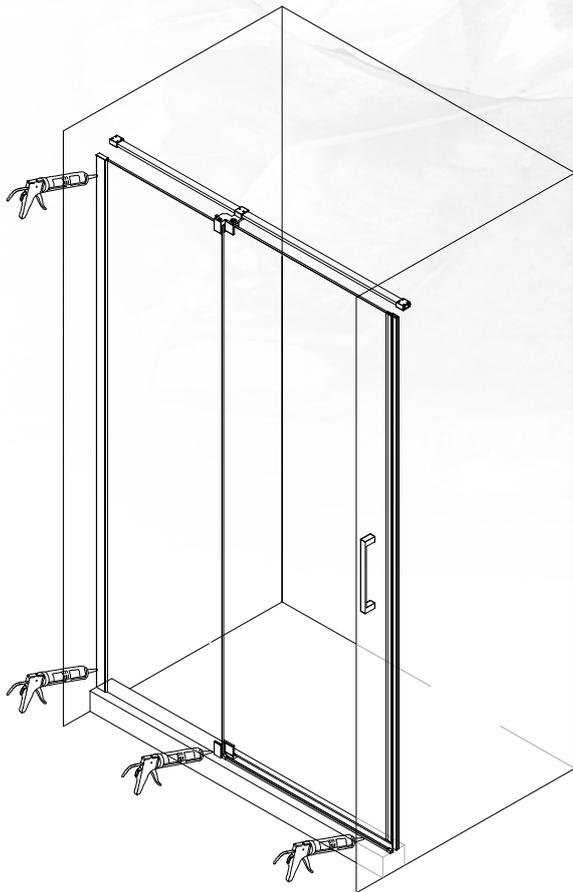

Silicone outside of shower screen only

# PROFILE SHOWER SCREEN INSTALLATION INSTRUCTIONS FRONT AND RETURN

**PLEASE READ CAREFULLY AS NOT  
ALL INSTRUCTIONS ARE THE SAME**

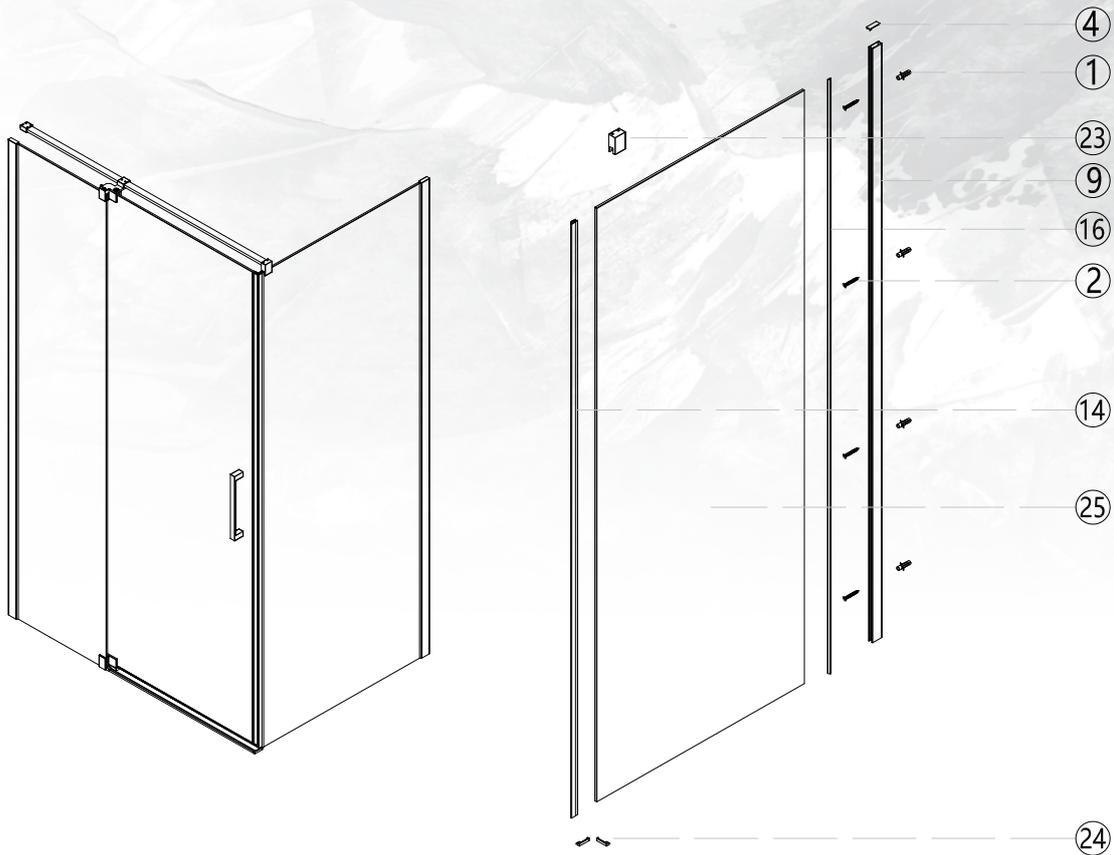





NO.	Item	Qty
1		x4
2		x4
16		x1
4		x1
9		x1
23		x1
24		x1

NO.	Item	Qty
14		x1
25		x1

# PROFILE SHOWER SCREEN INSTALLATION INSTRUCTIONS

**PLEASE READ CAREFULLY AS NOT  
ALL INSTRUCTIONS ARE THE SAME**

## STEP 1

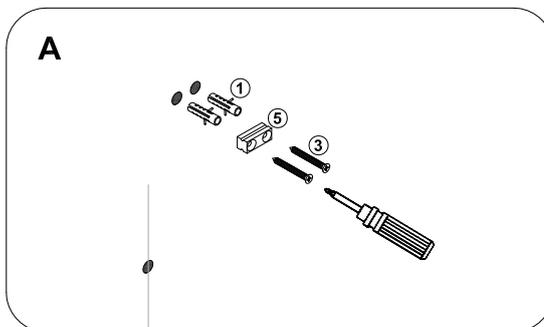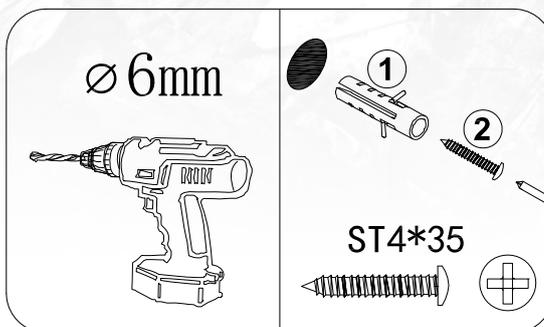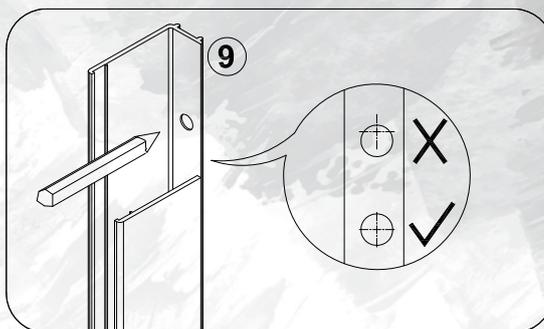
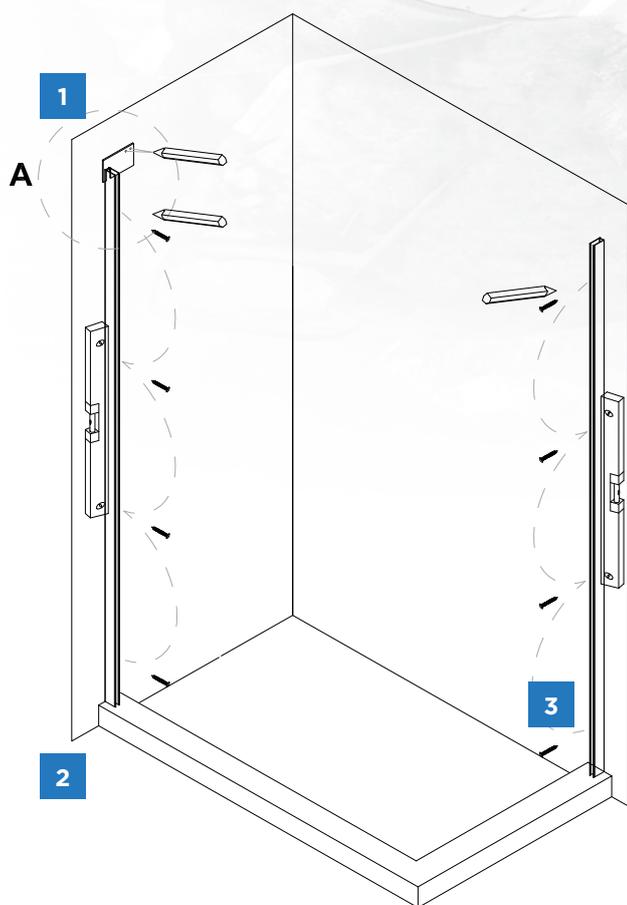


- 1 Measure in 6mm from edge of shower base or tile flange.
- 2 Fix wall jamb using screws provided, Oceano recommends fixing to studs.
- 3 Position template over wall jamb and ensure it is level before marking holes for wall bracket.

# PROFILE SHOWER SCREEN INSTALLATION INSTRUCTIONS

**PLEASE READ CAREFULLY AS NOT  
ALL INSTRUCTIONS ARE THE SAME**

## STEP 2

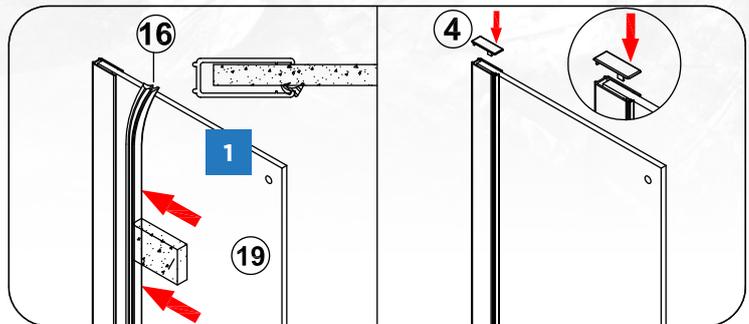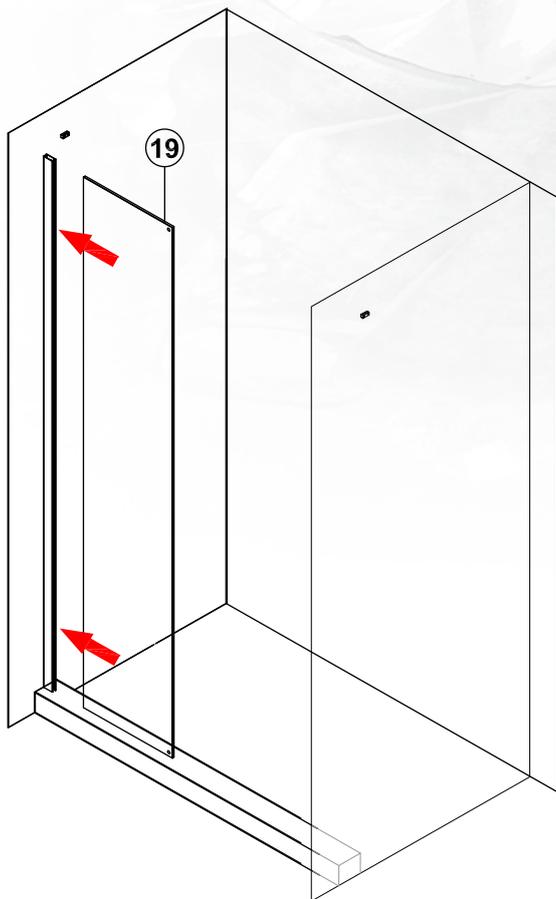


- 1 Ensure fixed glass panel is plumb then insert plastic strip on the outside of the shower screen wall jamb. Start from the bottom and work towards the top , do not cut excess plastic strip in-case it needs to be removed for adjustment later.

# PROFILE SHOWER SCREEN INSTALLATION INSTRUCTIONS

**PLEASE READ CAREFULLY AS NOT  
ALL INSTRUCTIONS ARE THE SAME**

## STEP 3

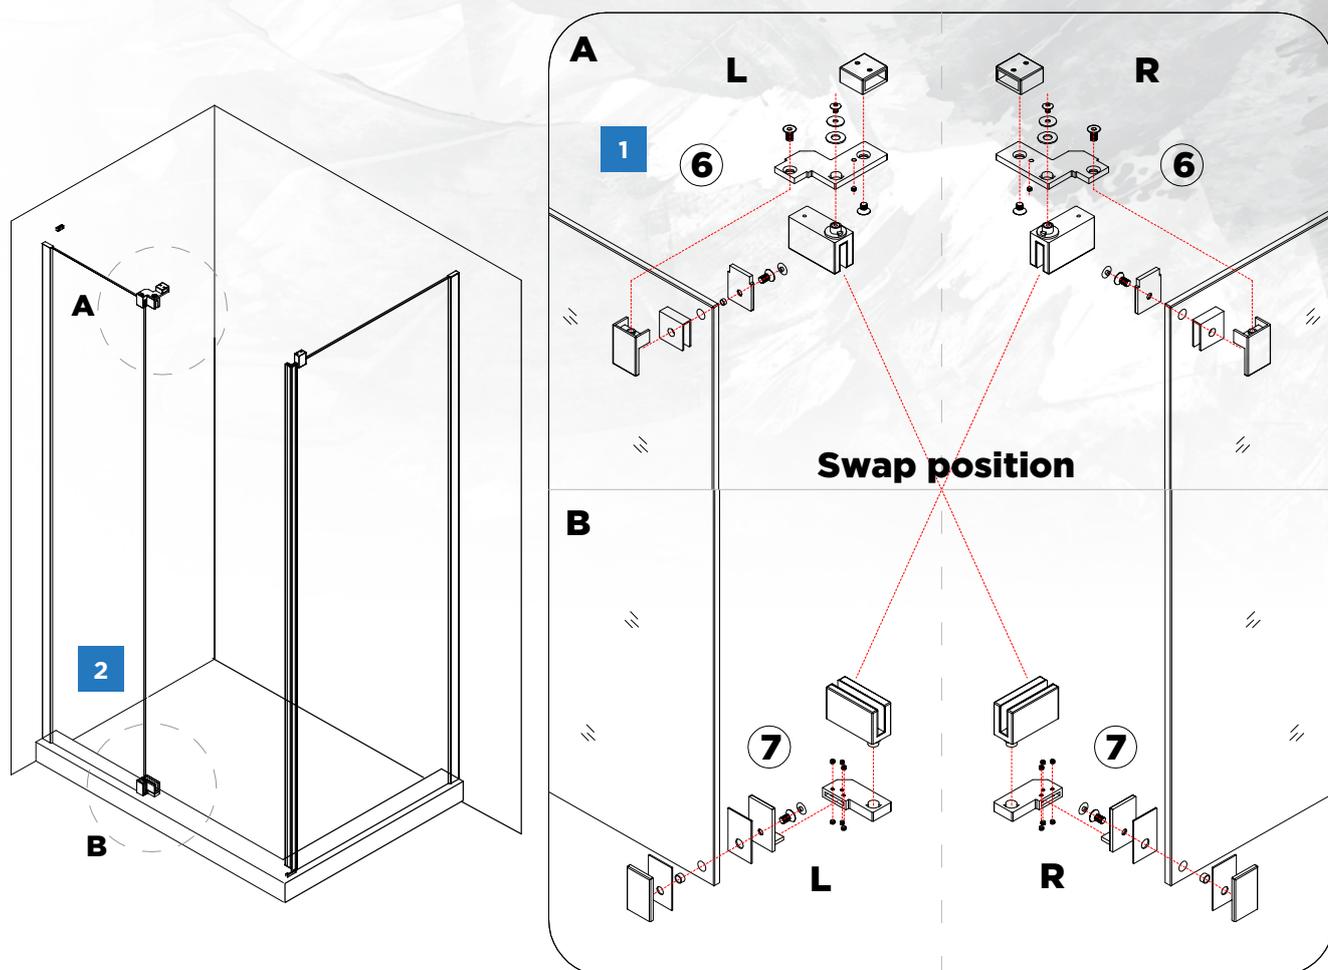

Hinges are setup for left hand hinge, right hand handle on door from factory.

1 Change hinge from left hand to right hand.

Disassemble top pivot assembly , turn pivot arm upside down.

Reassemble top bracket using the bottom pivot block . then use the top pivot block for the bottom pivot assembly.



Ensure all screw are tight.

Install hinge assemblies to glass panel.

# PROFILE SHOWER SCREEN INSTALLATION INSTRUCTIONS

**PLEASE READ CAREFULLY AS NOT  
ALL INSTRUCTIONS ARE THE SAME**

## STEP 4

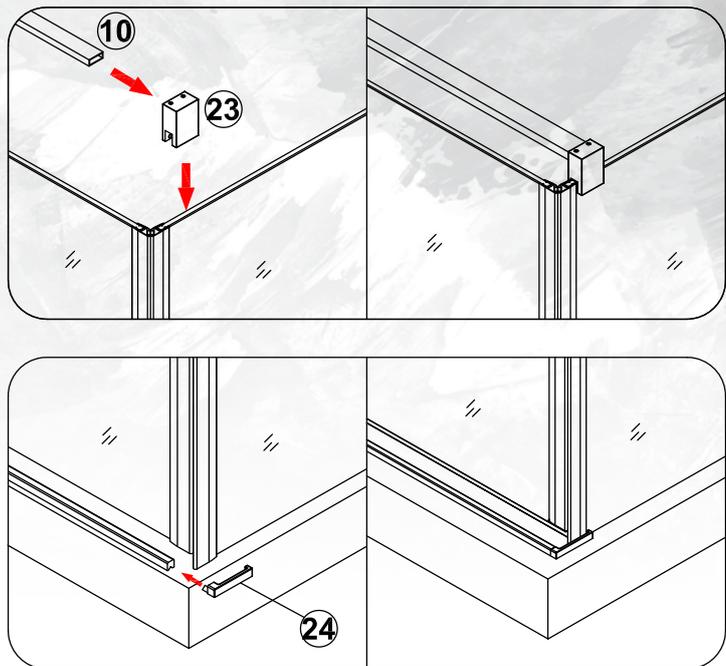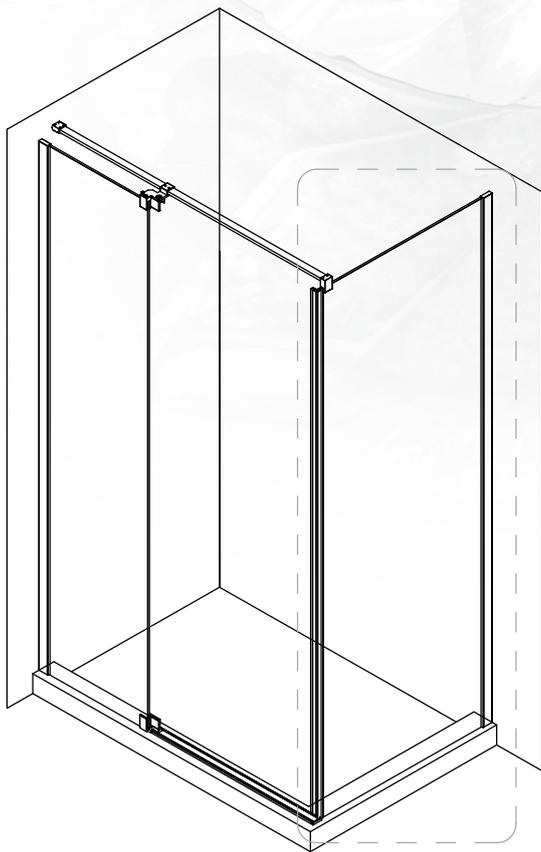

### **Full Details over the page, read all before proceeding.**

#### Understanding the Return Panel Measurement

The return panel glass is manufactured shorter than the final installed opening. This is intentional, as the water seals fitted after installation add extra width and ensure a watertight door.

#### How to Measure Correctly

- 1 Refer to the minimum glass size listed on the specification sheet.
  - o This minimum size represents the glass fully inserted into the wall channel, with the seals and door attached.
- 2 The glass will not physically measure this size once the seals are fitted — the seals provide the additional width.
- 3 If a larger finished opening is required (e.g., 10 mm more than the minimum):
  - o Position the glass fully into the wall channel on the shower base, as per the minimum measurement.
  - o From that position, measure outwards the additional amount required (e.g., +10 mm).
  - o Mark this position on the shower base.

# PROFILE SHOWER SCREEN INSTALLATION INSTRUCTIONS

**PLEASE READ CAREFULLY AS NOT  
ALL INSTRUCTIONS ARE THE SAME**

## STEP 4 CONTINUED

### 4 Final Glass Positioning

- o Pull the glass out of the wall channel until the outside edge of the panel aligns with the mark you made.
- o Fit the wall-channel seal at this position.
- o This is the correct final position of the glass before the final door seals are attached.

### Example

If the minimum size is 810mm and you need 820 mm:

- Insert the glass fully into the channel.
- Measure +10 mm outwards and mark the base.
- Pull the glass to the +10 mm mark, then fit the seal.
- After seals are installed, the final width will be correct.

Position bracket (23) over end panel

- 1 Cut top rail to length, be sure to allow for both wall brackets when calculating length.




Slide top rail through pivot assembly and line up to bracket 23.

Ensure return panel is plumb before tightening top rail screws

# PROFILE SHOWER SCREEN INSTALLATION INSTRUCTIONS

**PLEASE READ CAREFULLY AS NOT  
ALL INSTRUCTIONS ARE THE SAME**






## STEP 5

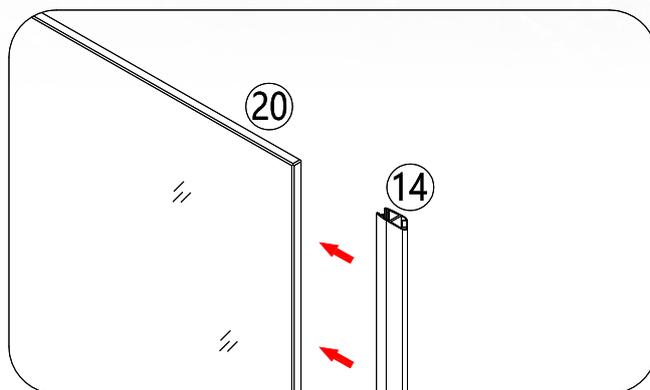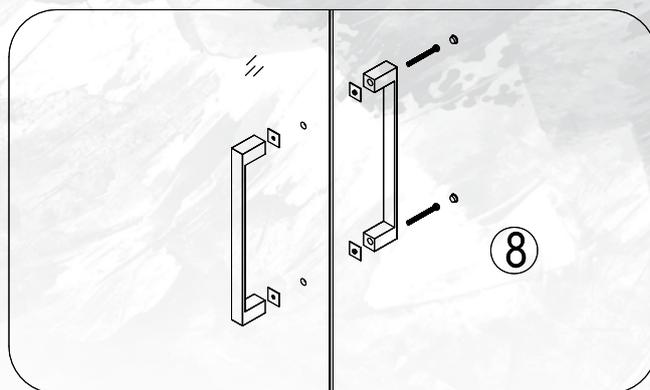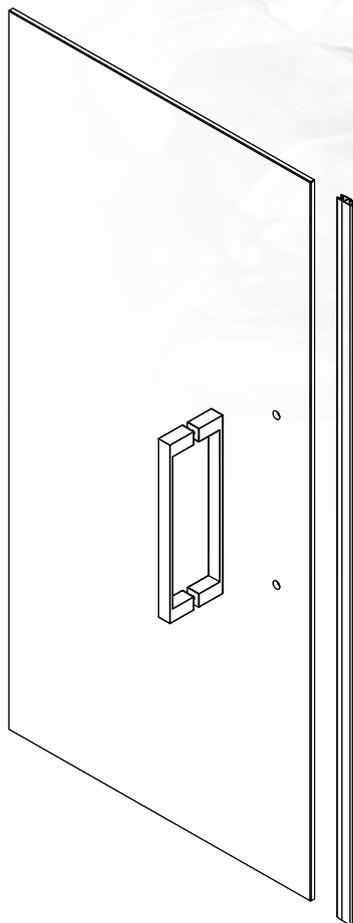

# PROFILE SHOWER SCREEN INSTALLATION INSTRUCTIONS

**PLEASE READ CAREFULLY AS NOT  
ALL INSTRUCTIONS ARE THE SAME**

## STEP 6

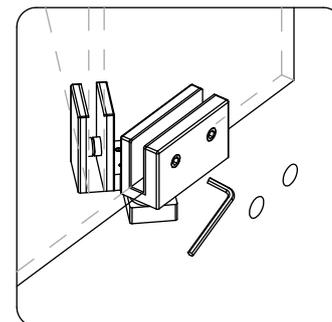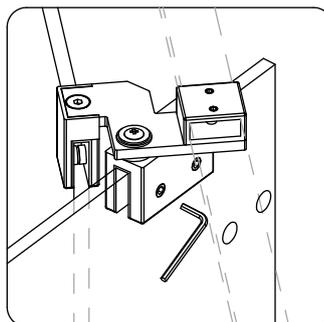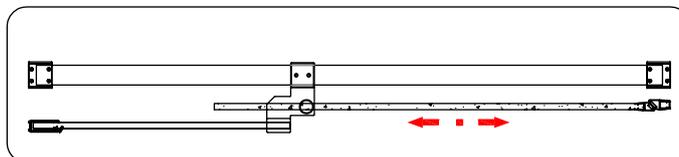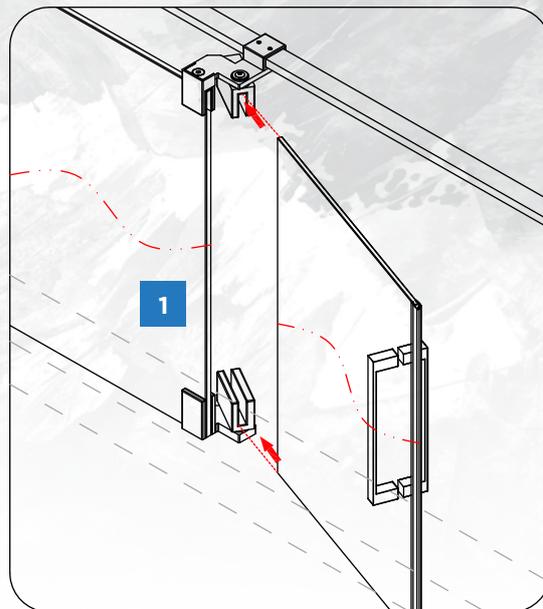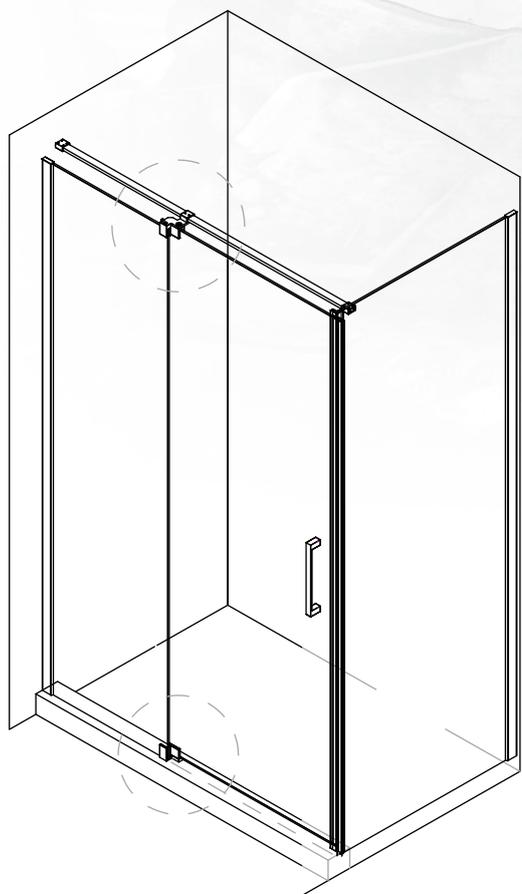


2 people may be required to install door panel.

- 1 Slide door panel into both pivot blocks.
- 2 Slide door in or out of pivot blocks so magnetic strip on the door lines up to the magnetic strip on the return panel.
- 3 Once both magnetic strips join correctly, tighten screws on top hinge first followed by bottom hinge.
- 4 If required remove sealing strip from return panel and move return panel in or out to ensure the screen is in correct position. Replace sealing strip to wall jamb once outside line of screen is correct.

# PROFILE SHOWER SCREEN INSTALLATION INSTRUCTIONS

**PLEASE READ CAREFULLY AS NOT  
ALL INSTRUCTIONS ARE THE SAME**

## STEP 7

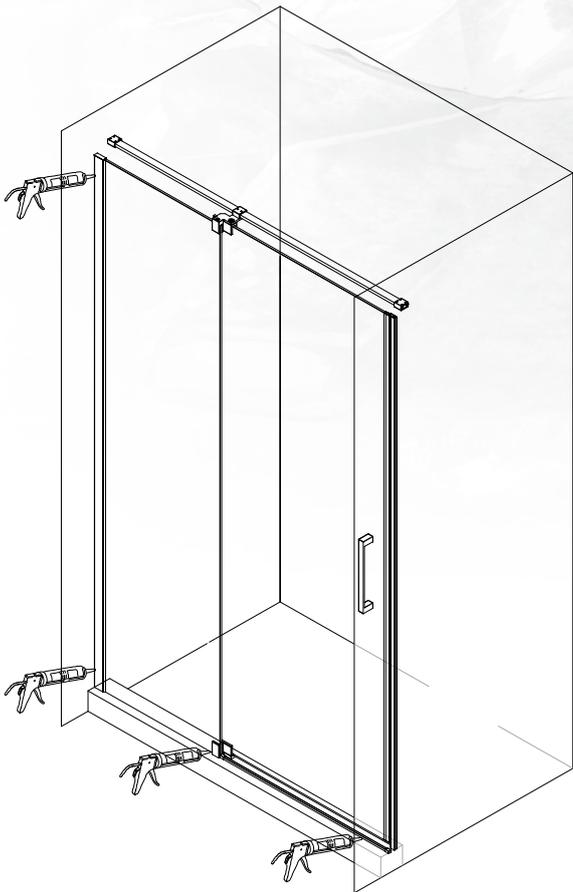

Silicone outside of shower screen only